



1. Launch IAP software, See below

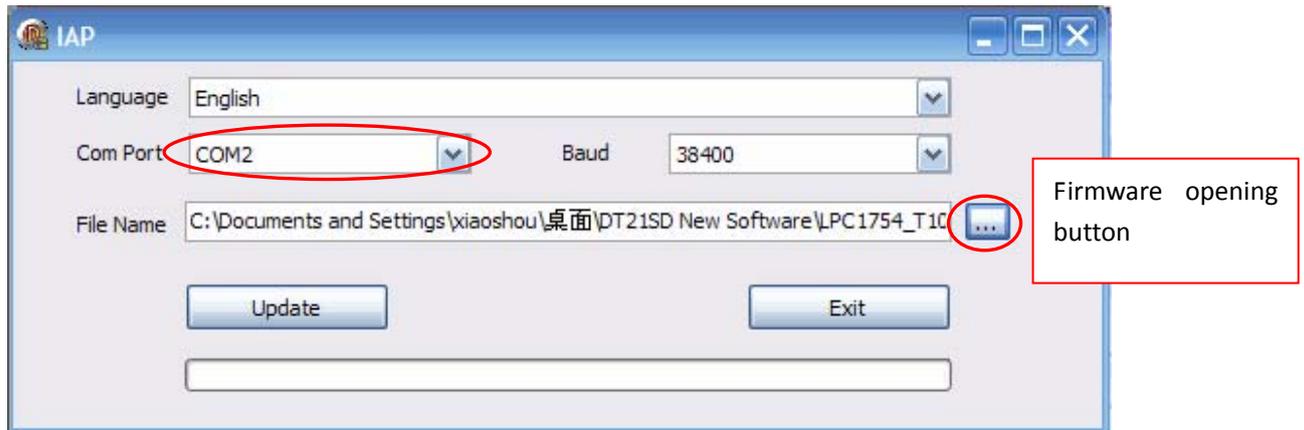

- 1). Select the **Com Port** for USB-485 converter, check from the computer
- 2). Baud: leave it as default 38400
- 3). Select the firmware: DMR18_PAL_V0105_20111221.bin

2. On the DMR18, enter IAP mode as follows:

In standby mode, input #8014, then 66666666 as password, the door station will enter IAP mode, see below

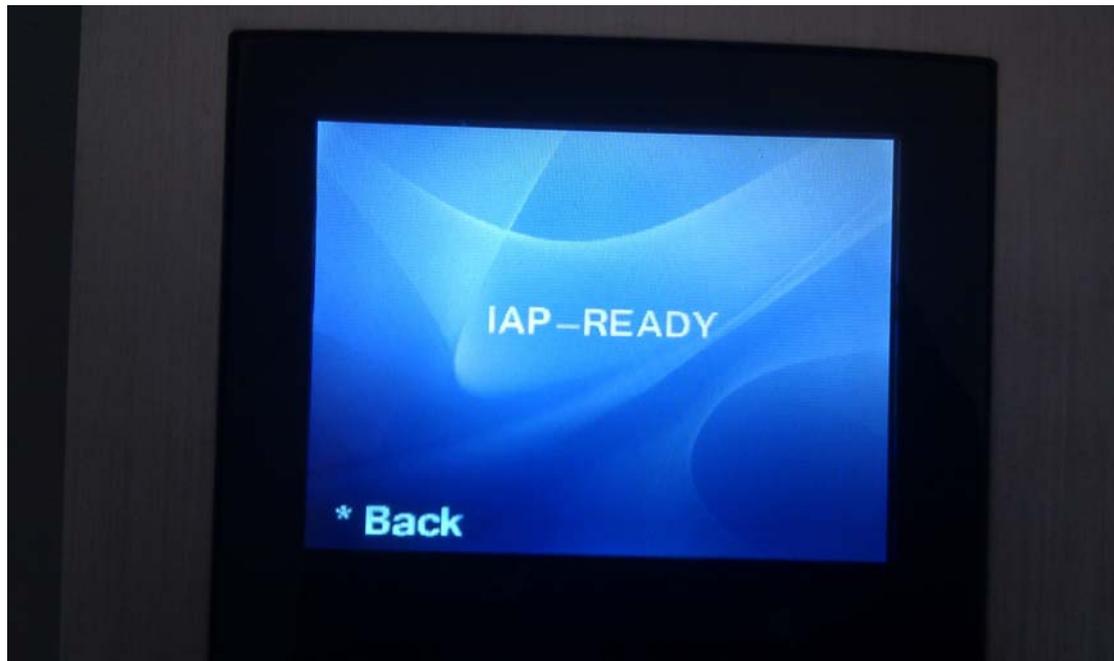

3. On IAP software, click on **update**, then wait until it is finished. A window will pop up to indicate that the updating is finished.

