


***This document is an aide for installing. This is not a full manual, when installing please read the Official Installer Guide!**

This module is intended to pass calls from a doorstation to a fixed or mobile phone.

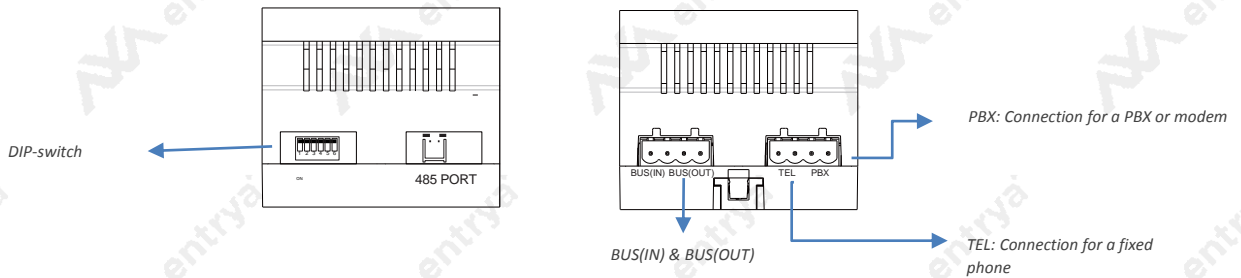

Remark! A phone can only be used on TEL if a PBX, modem or phoneline is connected!


Properties

Current


Working Temperature

Dimensions

30mA in repose, 80mA working
 -10°C tot +40°C
 72 x 90 x 60 mm (4x modules DIN)

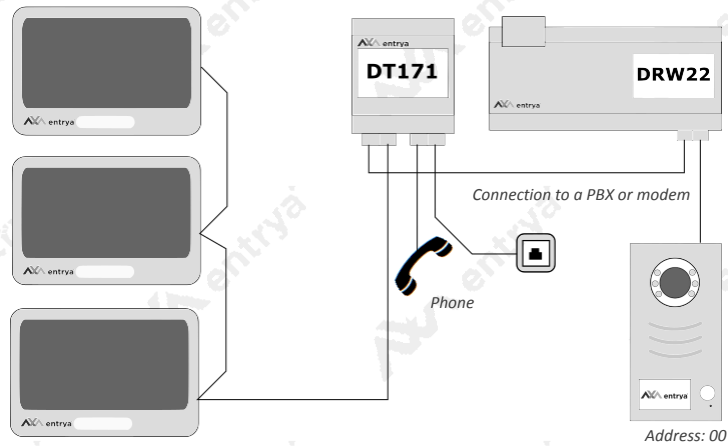

Configuration

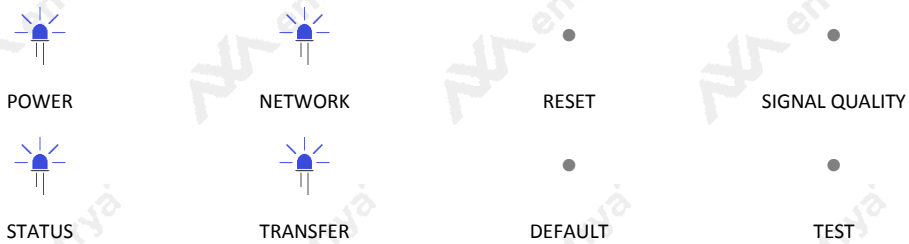

DESCRIPTION OF BUTTONS AND LEDS

Power	ON: Normal Fast Flashing: System Error
Network	ON: Phone-network is available
Status	One-time Flashing: Module is receiving a command
Transfer	Slow Flashing: Call is being transferred 3x Fast Flashing: Transfer Error ON: Call is transferred One-time Flashing: Factory Reset
Reset	Push 3 sec for a reboot
Signal Quality	N/A
Default	Push 3 sec for a Factory Reset
Test	N/A

DIP SWITCHES



Connected directly to a phoneline



Connected to a PBX or modem



Not allowed!



Volume exterior post is normal, sensibility microphone is high



Volume exterior post is high, sensibility microphone is normal



Not allowed!



No function!



Configuration VILLA



Configuration APPARTEMENT

Transferrmodes

- **No transfer:**
Calls are not being transferred
- **Transfer when absent:**
Calls are being transferred if a call is not answered on a monitor within 25 sec.
- **Immediately transfer:**
Calls are being transferred immediately.

Normal Use

FUNCTION

DESCRIPTION

Unlocking

- Press 1# for unlocking the first lock
- Press 2# for unlocking the second lock

Disconnecting

- Press 9# to disconnect the call
-